

Storing Your Honda

- With the engine stop switch in the RUN position, press the start button several times to crank the engine and distribute the oil.
 - Reinstall the spark plug and spark plug cap.
6. Remove the battery and charge it fully. Store it in an area protected from freezing temperatures and direct sunlight. Slow charge the battery (page 129) once a month.
 7. Wash and dry your scooter. Wax all painted surfaces. Apply rust-inhibiting oil to the chrome pieces.
 8. Inflate the tires to their recommended pressures (page 119).
 9. Store your scooter in an unheated area, free of dampness, away from sunlight, with a minimum of daily temperature variation.
 10. Place your scooter on blocks to lift both tires off the floor.
 11. Cover your scooter with a porous material. Avoid using plastic or similar non-breathing, coated materials that restrict air flow and allow heat and moisture to accumulate.