

## If a Fuse Blows

---

If you do not have a replacement fuse with the proper rating for the circuit, install one with a lower rating.

### NOTICE

*Replacing a fuse with one that has a higher rating greatly increases the chance of damage to the electrical system.*

### MAIN FUSE & CIRCUIT FUSE



(7) blown fuse

6. Install the fuse box cover and maintenance lid.
7. Lower and push down on the seat until it locks.