




## Left Side Cover Removal

Refer to *Safety Precautions* on page 45 .

LEFT SIDE

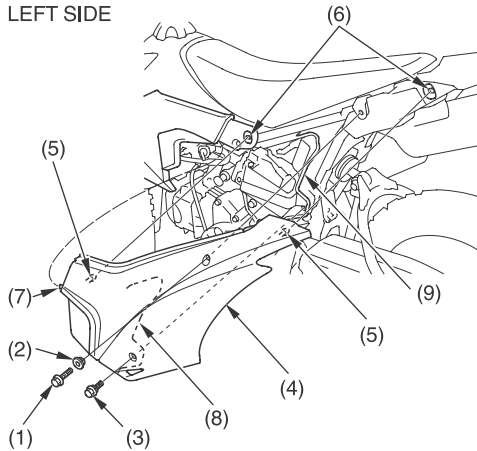

- |            |                |            |
|------------|----------------|------------|
| (1) bolt A | (4) side cover | (7) tab    |
| (2) collar | (5) prongs     | (8) rib    |
| (3) bolt B | (6) grommets   | (9) groove |

### Removal

1. Remove the bolt A (1), collar (2) and bolt B (3) securing side cover (4).
2. Pull the side cover prongs (5) out of the rubber grommets (6).

### Installation

1. Attach the side cover on the rear frame, aligning its tab (7) with the rear edge of the left fuel tank shroud.
2. Align the side cover prongs with the rubber grommets, align the rib (8) of the side cover with the groove (9) of the battery compartment. Press the side cover into position.
3. Install the bolt A, bolt B and collar and tighten them.

