



9. Clutch – check operation, and adjust if necessary (pages 25 – 26).
10. Spark plug and high tension terminal – check for looseness (pages 71 – 72).
11. Engine stop button – check for proper function (page 39).
12. Nuts, bolts, fasteners – check the front and rear wheels to see that the axle nuts are tightened securely. Check security of all other nuts, bolts, and fasteners.

