




### CRANKCASE BREATHER

Refer to the Safety Precautions on page 55.

Service more frequently if your motorcycle is ridden in the rain or often at full throttle. If the drain tube overflows, the air filter may become contaminated with engine oil causing poor engine performance.

1. Remove the crankcase breather drain tube (1).
2. Drain deposits into a suitable container.
3. Install the crankcase breather drain tube.

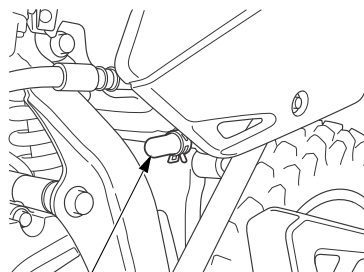

(1)

(1) Crankcase breather drain tube

