


Freeplay Adjustment:

1. Adjust freeplay with the throttle cable adjuster (1). Measured in grip rotation, the standard throttle grip freeplay is:  
3 – 6 mm (0.1 – 0.2 in)
2. To adjust the freeplay, slide the throttle cable boot (2), then loosen the lock nut (3) and turn the cable adjuster.
3. After adjustment, check again for smooth rotation of the throttle grip from the fully closed to the fully open position with the steering to the full right and left as well as straight ahead.

If proper throttle freeplay cannot be achieved, contact your dealer.

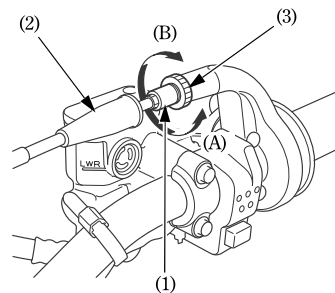

- |                    |                       |
|--------------------|-----------------------|
| (1) Cable adjuster | (A) Decrease freeplay |
| (2) Cable boot     | (B) Increase freeplay |
| (3) Lock nut       |                       |