 

 


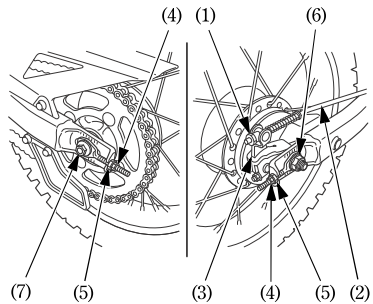

Rear Wheel Removal

1. Raise the rear wheel off the ground by placing a support block under the engine.
2. Unscrew the rear brake adjuster (1).
3. Press and release the rear brake pedal and disconnect the brake rod (2) from the brake arm (3).
4. Loosen the lock nuts (4) and adjusting nuts (5) on the chain adjusters on both sides.
5. Unscrew the axle nut (6) and pull out the axle shaft (7). Push the wheel forward and derail the drive chain from the rear sprocket. Remove the wheel.



- | | |
|--------------------|-------------------|
| (1) Brake adjuster | (5) Adjusting nut |
| (2) Brake rod | (6) Axle nut |
| (3) Brake arm | (7) Axle shaft |
| (4) Lock nut | |

