


The battery (1) is in the battery compartment under the seat.

Removal:

1. Make sure the ignition switch is OFF.
2. Remove the left side cover and seat (page 40, 41).
3. Disconnect the negative (-) terminal lead (2) from the battery first, then disconnect the positive (+) terminal lead (3).
4. Release the battery holder band (4) from the hook.
5. Pull out the battery from the battery box.

Installation:

1. Reinstall in the reverse order of removal.
Be sure to connect the positive (+) terminal first, then the negative (-) terminal.
2. Check all bolts and other fasteners are secure.

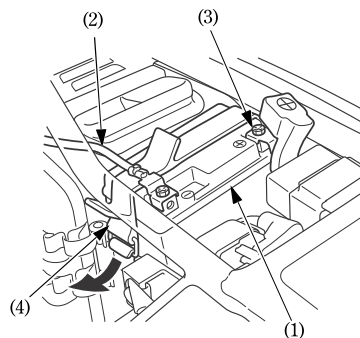

- (1) Battery
- (2) Negative (-) terminal lead
- (3) Positive (+) terminal lead
- (4) Battery holder band

