



Rear Wheel Removal

1. Raise the rear wheel off the ground by placing a support block under the engine.
2. Unscrew the rear brake adjuster (1).
3. Press and release the rear brake pedal and disconnect the brake rod (2) from the brake arm (3).
4. Loosen the rear axle nut (4) while holding the axle.

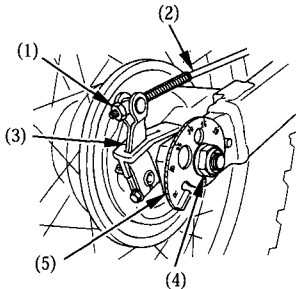

- | | |
|---------------|---------------------|
| (1) Adjuster | (4) Axle nut |
| (2) Brake rod | (5) Chain adjusters |
| (3) Brake arm | |

5. Turn both adjusters (5) so the rear wheel can be moved all the way forward for maximum drive chain slack.
6. Move the rear wheel forward. Derail the drive chain from the driven sprocket.
7. Remove the axle nut, chain adjusters, washer, side collar, axle (6) and rear wheel from the swingarm.

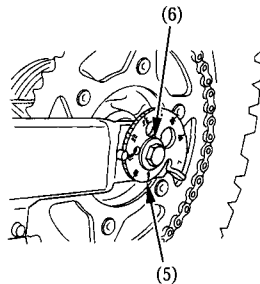

- | |
|---------------------|
| (5) Chain adjusters |
| (6) Axle |