


Installation:

1. Reverse the removal procedure. Make sure that the lug (7) on the swingarm is located in the slot (8) in the brake panel.
2. Adjust the drive chain (pages 69 – 70).
3. Tighten the axle nut to:
108 N·m (11.0 kgf.m, 80 lbf-ft)
4. Adjust the brake (page 14).
5. Apply the brake several times and check for free wheel rotation after the brake pedal is released.

If a torque wrench was not used for installation, see your Honda dealer as soon as possible to verify proper assembly. Improper assembly may lead to loss of braking capacity.

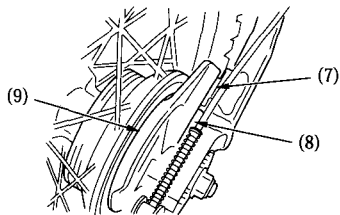

- (7) Lug
- (8) Slot

- (9) Brake panel