

Brake Shoe Wear


(Refer to the Safety Precautions on page 35.)

The rear brake is equipped with a brake wear indicator. When the brake is applied, an arrow (1) attached to the brake arm (2) moves toward a reference mark (3) on the brake panel (4). If the arrow aligns with the reference mark on full application of the brake, the brake shoes must be replaced.

See your Honda dealer for this service.

When the brake service is necessary, see your Honda dealer. Use only genuine Honda parts or its equivalent.

REAR BRAKE

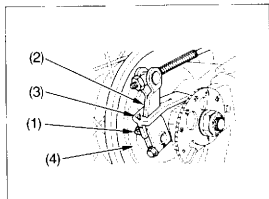

- (1) Arrow
- (2) Brake arm
- (3) Reference mark
- (4) Brake panel

Battery

(Refer to the Safety Precautions on page 35.)

It is not necessary to check the battery electrolyte level or add distilled water as the battery is a maintenance-free (sealed) type. If your battery seems weak and/or is leaking electrolyte (causing hard starting or other electrical troubles), contact your Honda dealer.

NOTICE

Your battery is a maintenance-free type and can be permanently damaged if the cap strip is removed.

⚠ WARNING

The battery gives off explosive hydrogen gas during normal operation.

A spark or flame can cause the battery to explode with enough force to kill or seriously hurt you.

Wear protective clothing and a face shield, or have a skilled mechanic do the battery maintenance.