


Main fuse

The main fuse (1) is located behind the left side cover. The specified fuse is:

7.5 A

1. To prevent an accidental short circuit, turn the ignition switch OFF before checking or replacing the fuse.
2. Remove the left side cover (page 28).
3. Remove the starter magnetic switch (2) from the battery box (3).
4. Disconnect the wire connector (4) of the starter magnetic switch.
5. Pull out the fuse. If the fuse is blown install a new main fuse (5).
6. Reconnect the wire connector.
7. Install the starter magnetic switch.
8. Install the left side cover.

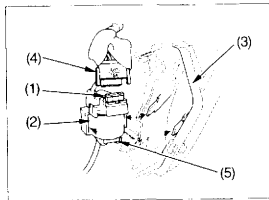


- (1) Main fuse
- (2) Starter magnetic switch
- (3) Battery box
- (4) Wire connector
- (5) Spare main fuse

Front Suspension

(Refer to the Safety Precautions on page 35.)

Check the fork operation by locking the front brake and pumping the forks up and down several times. The suspension should function smoothly, with no oil leakage from the fork legs. Damaged, binding, or leaking fork should be repaired before the motorcycle is operated. Check security of all fork and handlebar mounting bolts (1).

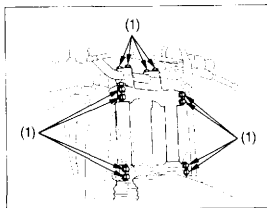

- (1) Mounting bolts

(Illustration only for reference)

Operating the motorcycle with loose, worn, or damaged steering or front suspension components may adversely affect vehicle handling and stability. If any suspension components appear worn or damaged, consult your Honda dealer for further inspection. The suspension components are directly related to safety and your Honda dealer is qualified to determine whether or not replacement parts or repairs are needed.