

8. Clutch—check operation, and adjust if necessary (pages 18 – 19 ).
9. Lights and horn—check that headlight, brake/tail light, turn signals, indicators and horn function properly.
10. Spark plug and high tension terminal – check for looseness.
11. Engine stop switch—check for proper function (page 31 ).
12. Side stand ignition cut-off system—check for proper function (page 83 ).
13. Nuts, bolts, fasteners – check the front wheel to see that the axle shaft and axle holder nuts are tightened securely. Check security of all other nuts, bolts, and fasteners.