


Exhaust Pipe/Muffler

Exhaust Pipe Removal


1. Remove the muffler (page 88).
2. Remove the exhaust pipe joint nuts (1), exhaust pipe (2) and old gasket (3).

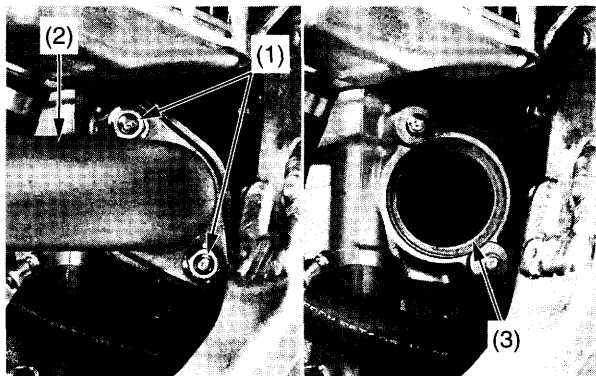

- (1) exhaust pipe joint nuts
(2) exhaust pipe
(3) gasket (old)

Exhaust Pipe Installation

1. Install a new exhaust pipe gasket (1) as shown.
2. Install the exhaust pipe (2) and exhaust pipe joint nuts (3).

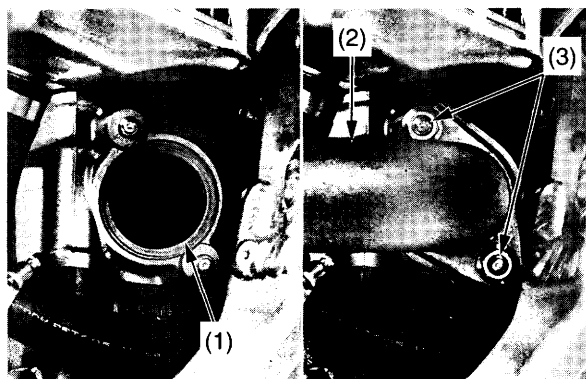

- (1) exhaust pipe gasket (new)
(2) exhaust pipe
(3) exhaust pipe joint nuts

3. Install the muffler (page 89) but do not tighten the bolts yet.
4. Tighten the exhaust pipe joint nuts to the specified torque:
21 N·m (2.1 kgf·m, 15 lbf·ft)
5. Tighten the muffler clamp bolt, muffler mounting A bolt and B bolt (page 89).
6. Installation can be done in the reverse order of removal.