## **Starting & Stopping the Engine**

## Flooded Engine

If the engine fails to start after repeated attempts, it may be flooded with excess fuel. To clear a flooded engine:

- 1. Push the choke lever down all the way to OFF.
- 2. Open the throttle fully.
- 3. While pushing the engine stop button, crank the engine several times with the kickstarter.
- 4. Release the engine stop button.
- 5. Follow the *High Air Temperature* starting procedure (page 32).

## How to Stop the Engine

To stop the engine, shift into neutral, push the engine stop button in, and hold it in until the engine stops.