Storing Your Honda

- 5. Wash and dry your motorcycle.
- 6. Lubricate the drive chain.
- 7. Inflate the tires to their recommended pressures (page 94).
- 8. Store your motorcycle in an unheated area, free of dampness, away from sunlight, with a minimum of daily temperature variation.
- Cover your motorcycle with a porous material. Avoid using plastic or similar nonbreathing, coated materials that restrict air flow and allow heat and moisture to accumulate.

Removal from Storage

- 1. Uncover and clean your motorcycle.
- 2. If your motorcycle has been stored for more than four months—change the engine oil (page 64).
- 3. If your motorcycle has been stored for more than two months—drain and replace the fuel.
- 4. Lubricate the drive chain.
- 5. Perform a pre-ride inspection (page 27), then test-ride your motorcycle at low speeds.