


## AIR CLEANER

Refer to the Safety Precautions on page 48 .

The air cleaner should be serviced at regular intervals (page 50 ). Service more frequently when riding in unusually wet or dusty areas.

1. Remove the left side cover (page 34 ).
2. Remove the rubber band (1) from the hook (2) and remove the air cleaner housing cover (3). Unhook the retainer (4) and remove the air cleaner (5).

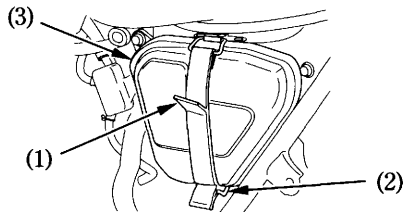


- (1) Rubber band  
(2) Hook

- (3) Air cleaner  
housing cover

3. Wash the air cleaner in clean, nonflammable or high flash point solvent and let it dry thoroughly.

Never use petrol or low flash point solvents for cleaning the air cleaner. A fire or explosion could result.

4. Soak the air cleaner in gear oil (SAE 80-90) until saturated, then squeeze out the excess oil.
5. Reinstall the air cleaner.
6. Reinstall the left side cover.

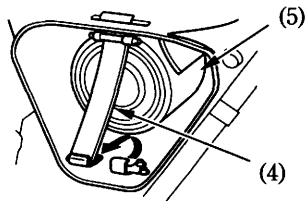

- (4) Retainer

- (5) Air cleaner