

Maintenance Safety Tips

Maintenance Safety Tips

- Stop the engine and remove the key when servicing.
- Park on a flat and stable surface using the side stand.

