

## Engine Oil Reservoir

1. The engine on the CRM250 operates on a two(2) stroke mix. Oil input is controlled by an oil injection pump.
2. Two stroke oil is held in a reservoir located behind right hand radiator shroud.
3. To remove oil filler cap, you must first remove the radiator shroud by taking out the two (2) screws and one (1) bolt.
4. By releasing the steel clip, you can remove the oil filler cap.
5. Use only a high quality two (2) stroke oil.
6. Fill reservoir to oil level gauge indicated on upper part of reservoir. (Refer diagram).

