

1. The Honda CRM250 has a liquid cooled engine, Coolant level should be checked as part of your basic maintenance.
2. You can do this by visually inspecting the *coolant level*, behind the left hand side cover.
3. Make sure bike is on level ground and ensure that coolant level falls within the upper and lower graduations.



Caution

Do not remove the radiator cap while the engine is hot. Coolant can spurt out, causing severe scalding.

Allow the engine and radiator to cool before attempting to remove the radiator cap.

