

Brakes

Front Brake

< Brake fluid level check >

Place the motorcycle on flat surface and set the side stand. Move the handlebar to make sure the reservoir cap surface is level

Check the fluid level is above the lower limit line (minimum line).

If the fluid level is below the minimum, brake pads may be worn. Check the pads
(p 69)

If the brake pads are fine, there may be a leak in the brake system.

Contact an Authorized Honda Dealer.

FRONT

