

MAJOR COMPONENTS (Information you need to operate this motorcycle)

▲WARNING

* If the Pre-ride Inspection (page 30) is not performed, severe personal injury or vehicle damage may result.

BRAKES

Front Brake

Brakes are items of personal safety and should always be maintained in proper adjustment.

The distance the front brake lever moves before the brake starts to engage is called free play.

Measured at the tip of the front brake lever, free play should be maintained at:

(UY type)


10–20 mm (0.4–0.8 in)

(UB, NZ type)

20–30 mm (0.8–1.2 in)

Adjustment:

1. Loosen the lock nut (1) and turn the adjuster (2). Tighten the lock nut (1) and check the adjustment.
2. If the adjuster is threaded out near its limit or if the correct free play cannot be obtained, loosen the lock nut (1) and turn in the cable adjuster (2) completely. Tighten the lock nut (1).

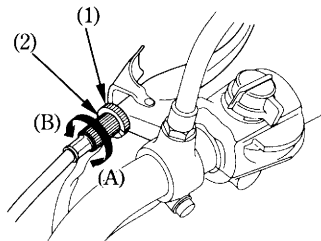

- (1) Lock nut (A) Increase free play
(2) Brake cable adjuster (B) Decrease free play