

Installation Notes:

- Reverse the removal procedure.
- Tighten the axle nut and stopper arm nut to specified torque.

Axle nut torque:

(UB,NZ type)

52 N·m (5.3 kgf·m , 38 lbf·ft)

(UY type)

88 N·m (9.0 kgf·m , 65 lbf·ft)

- Adjust the brake (page 13) and drive chain (page 58).
- After installing the wheel , apply the brakes several times , and check for free wheel rotation when released.

▲WARNING

- * If a torque wrench was not used for installation, see your Honda dealer as soon as possible to verify proper assembly. Improper assembly may lead to loss of braking capacity.

CAUTION:

- * **Used cotter pins may not effectively secure fasteners. Always replace used cotter pins with new ones.**