


### Removal:

1. Remove the right side cover by removing the screw (page 29).
2. Remove the bolt (1).
3. Unhook the positive (+) terminal lead from the hook (2).
4. Press on the locking tabs (3) and open the battery case cover (4).

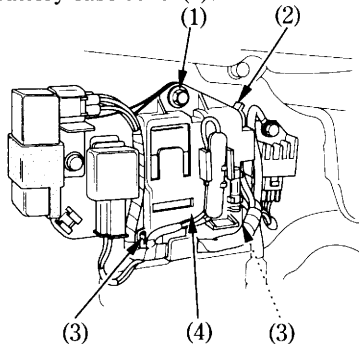


- (1) Bolt  
(2) Hook  
(3) Locking tabs  
(4) Battery case cover

5. Pull out the battery (5).
6. Remove the bolt and disconnect the negative (-) terminal lead (6) from the battery.
7. Remove the bolt and disconnect the positive (+) terminal (7) and from the battery.
8. Remove the battery.

### Installation:

Install the removed parts in the reverse order of removal.

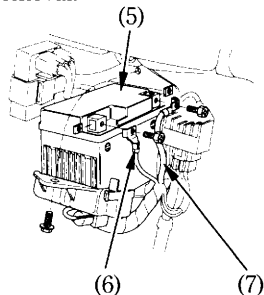

- (5) Battery  
(6) Negative (-) terminal lead  
(7) Positive (+) terminal lead