


4. Apply the brake several times and check for free wheel rotation after the brake pedal is released.

Make sure the cut-out on the adjusting nut is seated on the brake arm pin (3) after making final freeplay adjustment.

If proper adjustment cannot be obtained by this method, see your Honda dealer.

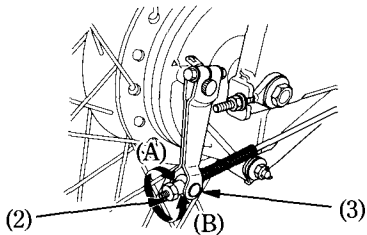

- (2) Rear brake adjusting nut
- (3) Brake arm pin
- (A) Decrease freeplay
- (B) Increase freeplay

Other Checks:

Make sure the brake rod, brake arm, spring and fasteners are in good condition.