


WHEEL REMOVAL

Refer to the Safety Precautions on page 50.

Front Wheel Removal

1. Raise the front wheel off the ground by placing a support block under the engine.
2. Remove the speedometer cable (1).
3. Remove the front brake adjusting nut (2) and remove the front brake cable (3) from the brake arm (4).
4. Remove the front axle nut (6).
5. Remove the front axle shaft (5) and the wheel.

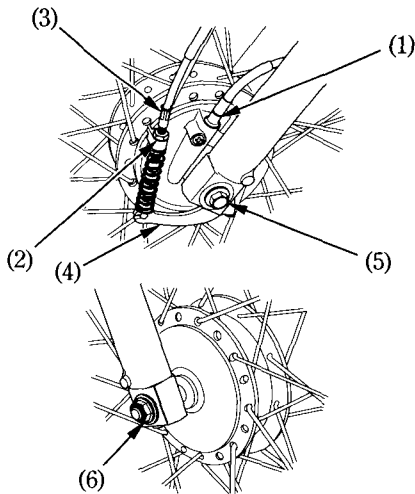

- | | |
|-------------------------|----------------------|
| (1) Speedometer cable | (4) Brake arm |
| (2) Brake adjusting nut | (5) Front axle shaft |
| (3) Front brake cable | (6) Front axle nut |