


## Headlight Bulb


1. Remove the screw (1) from the headlight case.
2. Gently pull the lower end of the headlight (2) forward and remove the headlight.
3. Disconnect the connector (3).

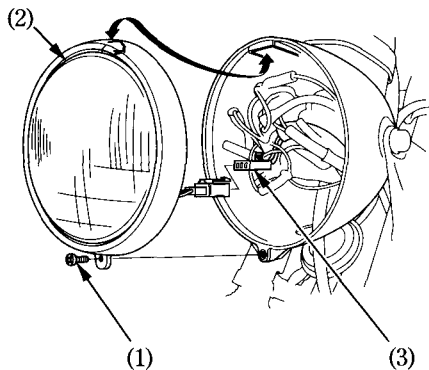

- (1) Screw  
(2) Headlight

- (3) Connector

4. Remove the seat rubber (4).
5. Remove the spring (5) and pull up the headlight bulb socket (6).
6. Slightly press the headlight bulb (7) and turn it counterclockwise.
7. Install a new bulb in the reverse order of removal.

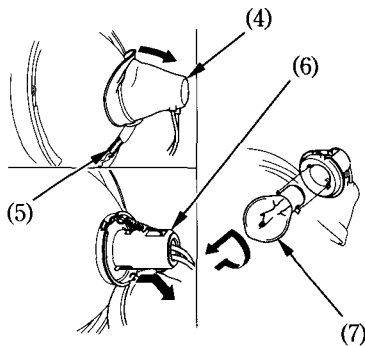

- (4) Seat rubber  
(5) Spring

- (6) Headlight bulb socket  
(7) Headlight bulb