

# OPERATING INSTRUCTIONS

## ■ INSTRUMENT AND INDICATOR LAMP

Speedometer ① is located on the headlight case and odometer ② incorporated in the speedometer indicates total distance travelled.

Gear speed range indicators ③ are curved bars shown on the speedometer dial plate to indicate the recommended operating range of the respective gears. High beam indicator lamp (red) ④ is located at the right side of the speedometer.

This lamp will be on when headlight is on high beam.

- ① Speedometer
- ② Odometer
- ③ Gear speed range indicators
- ④ High beam indicator lamp

