


## ● HEADLIGHT BEAM CONTROL SWITCH

The headlight beam control switch ① is located on the left handle grip. "L" is low beam position (low beam light and tail light on). "H" is high beam light and tail light on.

The headlight will only operate when the ignition switch is in the on position. Refer to ignition switch page 9.

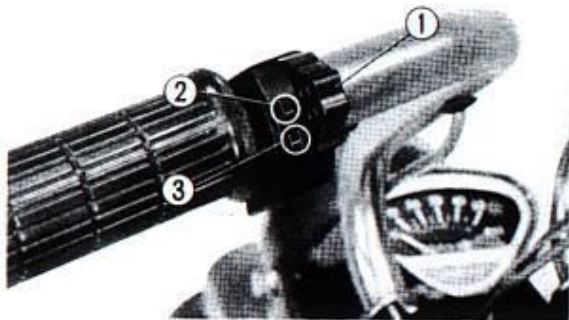

- ① Headlight beam control switch
- ② "L" position
- ③ "H" position