


● SEAT LATCH

The seat latch ① is located on the left rear end of the seat.

The seat can be raising by releasing the seat latch.

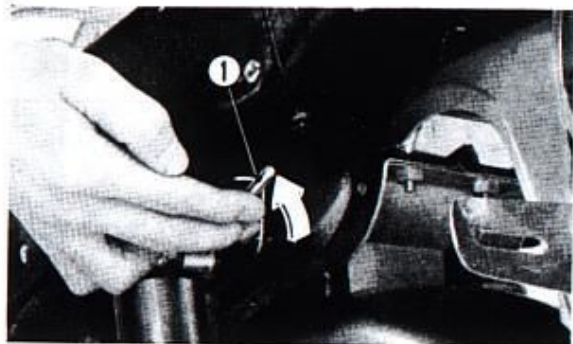

① Seat latch