


● CARBURETOR ADJUSTMENT

Perform the carburetor adjustment periodically as necessary.

Make the carburetor adjustment after the engine attains operating temperature.

1. Adjust the engine idle speed to approximately **1,300 rpm** with the throttle stop screw ①.
2. Turn the air screw ② slowly back and forth to obtain the point of the highest engine rpm.
3. If the idling speed increases excessively, reduce the speed with the throttle stop screw, then recheck the air screw.

Repeat the above procedure again if necessary to obtain a stable adjustment.

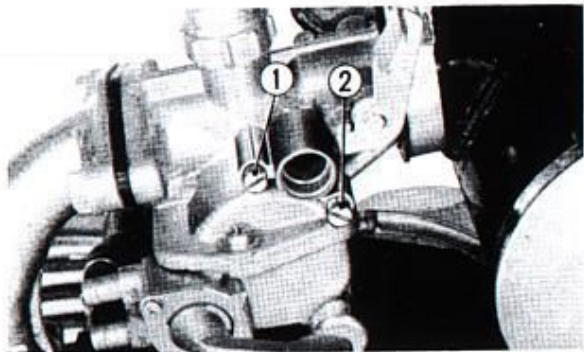

- ① Throttle stop screw
- ② Air screw