


● HEADLIGHT BEAM ADJUSTMENT

Headlight beam can be adjusted vertically and horizontally.

1. The vertical adjustment is made by loosening the bolts ① which mount the headlight.
2. The horizontal beam adjustment is made with the beam adjusting screw ② located on the left side of the headlight when facing the motorcycle. Turning the screw in will focus the beam toward the left side of the rider.

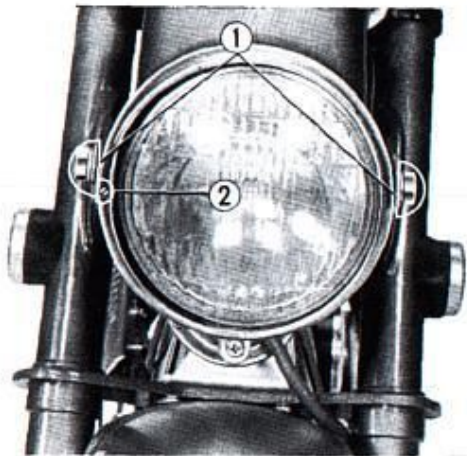

- ① Headlight mounting bolts
- ② Adjusting screw