


● REPLACING LIGHT BULBS

When exchanging the light bulbs, always replace the bulb with that of the specified type and rating. This is important to prevent the electrical lighting circuit from malfunctioning.

1. Headlight bulb replacement procedure

- Loosen the cross screw at the bottom of the headlight and remove the headlight rim.
- Remove the socket assembly ① by pushing down on the socket and twisting counterclockwise to unhook from the reflector ②.
- Pull the bulb ③ out and replace.

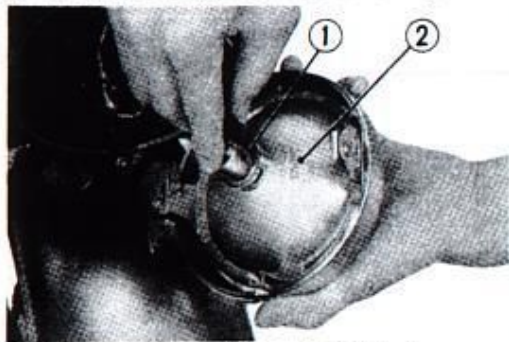

① Headlight socket ② Reflector



③ Headlight bulb.

Item	Light bulb
Headlight bulb	6V-15/15W
Tail/stoplight bulb	6V-5.3/17W