

Instruments *(Continued)*

Each meter unit setting

Except E type


You can change the fuel mileage meter unit. The unit of the current fuel mileage and average fuel mileage is changed by "FUEL" menu.


E type

You can change the speed and mileage unit and fuel mileage meter unit.

The unit of the odometer, tripmeter A/B, current fuel mileage and average fuel mileage is changed by "DIST" menu.

The unit of current fuel mileage, average fuel mileage and amount of remaining fuel is changed by "FUEL" menu.

To change the unit of each meter, select "UNIT" menu on the main menu screen, and then the display moves to the menu screen of "UNIT".  P.28

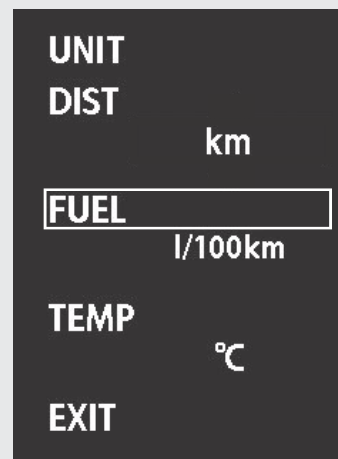

To end the each meter unit setting, select "EXIT" menu, and then the display returns to the main menu screen.