

Engine stop switch

Should normally remain in the  (Run) position.

▶ In an emergency, switch to the  (Off) position to stop the engine.

Hazard switch

Switchable when the ignition switch is ON. Can be turned to off regardless of the ignition switch position.

▶ The signals continue flashing with the ignition switch in OFF or LOCK after the hazard switch is on.

Start button