



Handle Grip Heater

CTX1300A is equipped with a handle grip heater that warms up your hands during ride. Wear gloves to protect your hands from the heated grips.

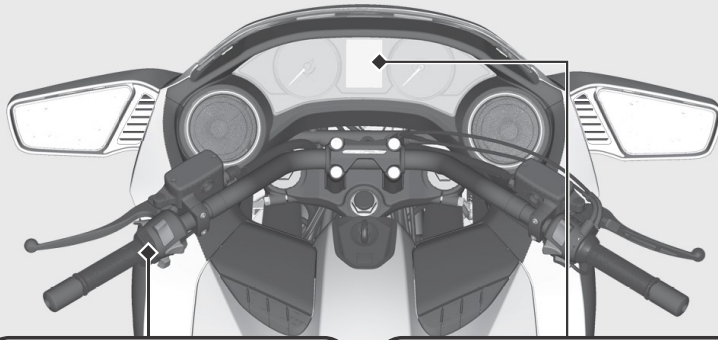

Handle grip heater indicator

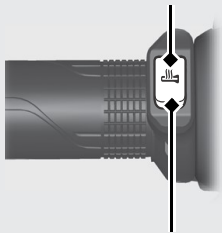

Handle grip heater switch

Handle grip heater status icon



Heater level

Handle grip heater indicator:

Displayed when handle grip heater is on. The selected heater level is indicated by the number of times the indicator blinks when the heater is turned on and the heater level is changed. For example, If you select heater level 5, the indicator blinks 5 times and repeats it 7 times.

Heater level:

The selected heater level is indicated for a few seconds when the handle grip heater switch is operated.

Handle grip heater status icon:

Displayed when the handle grip heater is on.

If "E-1", "E-2" or "E-3" brinks **P.121**

