


Audio System *(Continued)*

Changing the Audio Mode



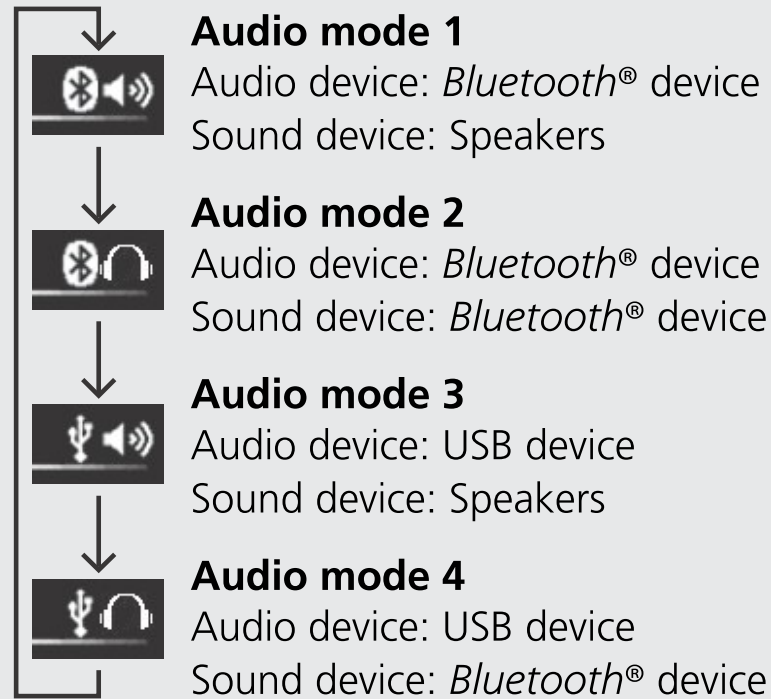

You can select four audio modes by pressing the **MODE** button.

The selected mode is displayed by audio device and sound device status icons.



→ Press the **MODE** button

Select an audio mode, the status icon will blink. The status icon will stop blinking when the information from the audio device is received.

-  The audio system plays a track from a *Bluetooth*[®] audio device.
-  The audio system plays a track from a USB device.
-  The audio sounds from the speakers.
-  The audio sounds from a *Bluetooth*[®] sound device.