


## Left Shroud

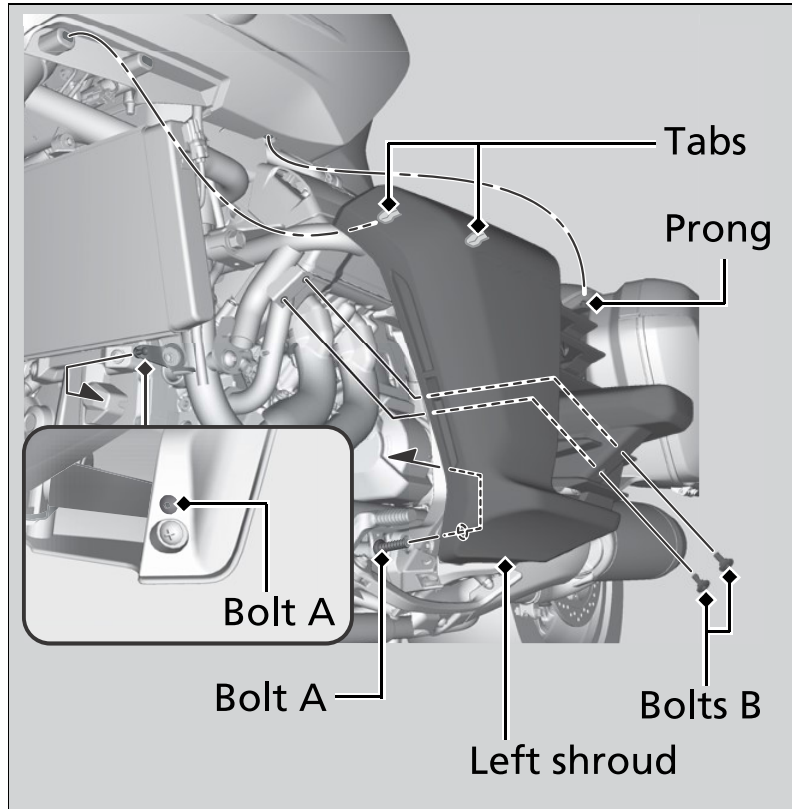

The left shroud must be removed to access the main fuse A, and to remove the left middle cowl.

### Removal

1. Remove the bolt A.
2. Remove the bolts B.
3. Remove the left shroud by releasing the tabs and prong.

### Installation

Install the parts in the reverse order of removal.