


Battery

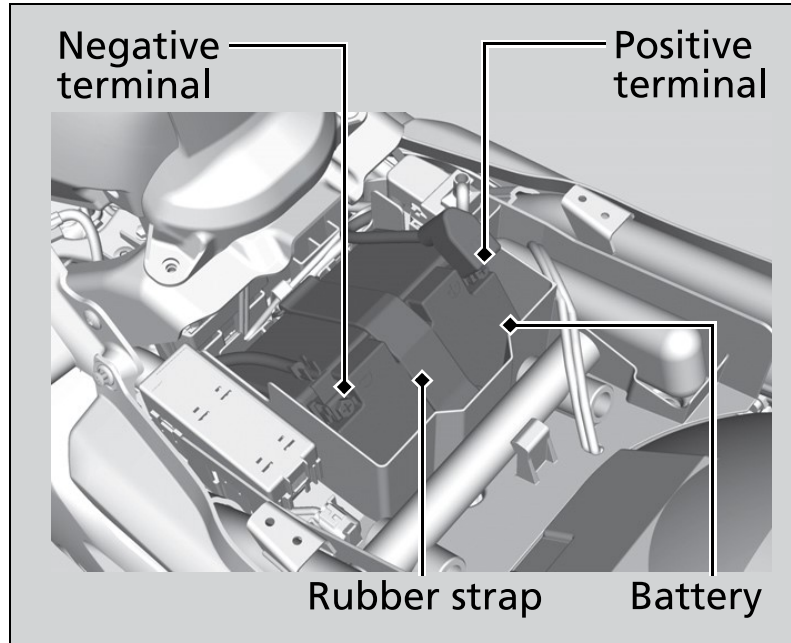

Removal

Make sure the ignition switch is off.

1. Remove the seat. ➤ P. 64
2. Unhook the rubber strap.
3. Disconnect the negative ⊖ terminal from the battery.
4. Disconnect the positive ⊕ terminal from the battery.
5. Remove the battery taking care not to drop the terminal nuts.

Installation

Install the parts in the reverse order of removal. Always connect the positive ⊕ terminal first. Make sure that bolts and nuts are tight.

The clock will be reset AM 1:00 if the battery is disconnected.

For proper handling of the battery, see "Maintenance Fundamentals." ➤ P. 54
 "Battery Goes Dead." ➤ P. 109