


AIR CLEANER

(Refer to the maintenance precautions on page 66).

The air cleaner should be serviced at regular intervals (page 61). Service more frequently when riding in unusually wet or dusty areas.


1. Remove the rear cover (1).
 - 1) Remove the clips (2) and screws (3).
 - 2) Pull the rear cover by releasing hooks (4).

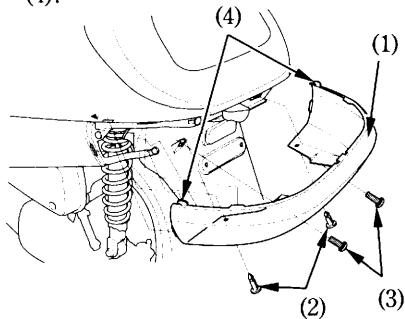

- (1) Rear cover
(2) Clips

- (3) Screws
(4) Hooks

2. Remove the left side cover (5).
 - 1) Remove the clips (6) and screws (7).
 - 2) Slide the left side cover and release the hooks (8).

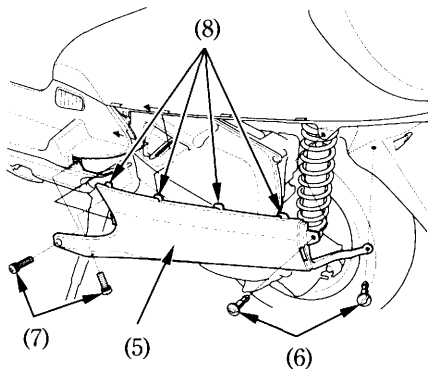

- (5) Left side cover
(6) Clips

- (7) Screws
(8) Hooks