

3. Make sure that the engine stop switch is at \bigcirc (RUN).
4. Turn the ignition switch (2) to ON.


Confirm the following:

- The low oil pressure indicator is ON.
- The immobilizer system (HISS) indicator is OFF.
- The PGM-FI malfunction indicator lamp (MIL) is OFF.

The low oil pressure indicator should go off 2–3 seconds after the engine starts. If the low oil pressure indicator lights during operation, stop the engine immediately and check the engine oil level.

NOTICE

Operating the engine with insufficient oil pressure can cause serious engine damage.

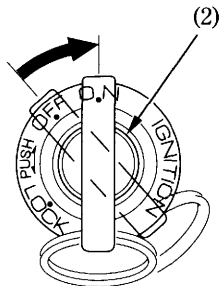

(2) Ignition switch