



5. Remove the oil filter (6) with a filter wrench and let the remaining oil drain out. Discard the oil filter.

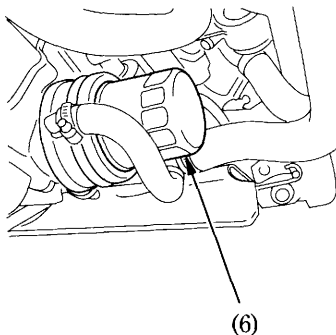

(6) Oil filter

6. Apply a thin coat of engine oil to the new oil filter rubber seal (7).
7. Using a special tool and a torque wrench, install the new oil filter and tighten to a torque of:  
26 N·m (2.7 kgf·m , 19 lbf·ft)

Use only the Honda genuine oil filter or a filter of equivalent quality specified for your model. Using the wrong Honda filter or a non-Honda filter which is not of equivalent quality may cause engine damage.

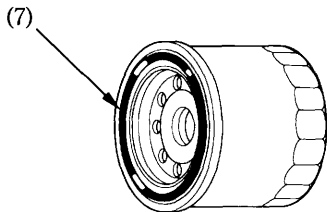

(7) Oil filter rubber seal