


5. Remove the plug maintenance lid (2).

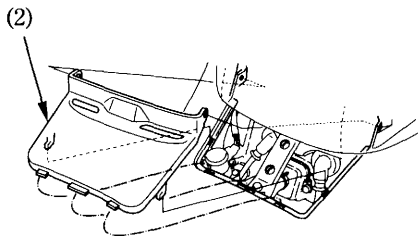


(2) Plug maintenance lid

6. Disconnect the spark plug caps (3) from the spark plugs.

7. Clean any dirt from around the spark plug bases.

Remove the spark plugs using a spark plug wrench (4) furnished in the tool kit.

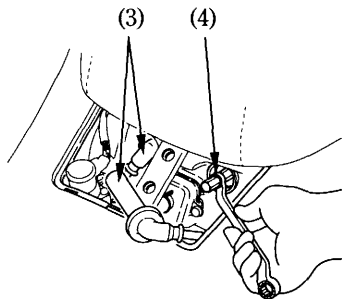

(3) Spark plug caps

(4) Spark plug wrench