


The battery is in the battery box below the seat.

#### Removal:


1. Make sure the ignition switch is OFF.
2. Open the seat (page 56 ).
3. Remove the screw (1) and battery cover (2).
4. Disconnect the negative (-) terminal lead (3) from the battery first, then disconnect the positive (+) terminal lead (4).
5. Pull out the battery (5) from the battery box.

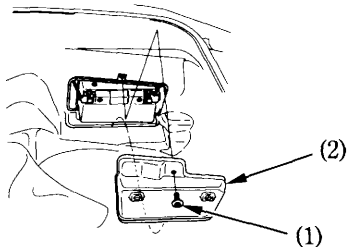

- (1) Screw  
(2) Battery cover

#### Installation:

1. Reinstall in the reverse order of removal. Be sure to connect the positive (+) terminal first, then the negative (-) terminal.
2. Check all bolts and other fasteners are secure.

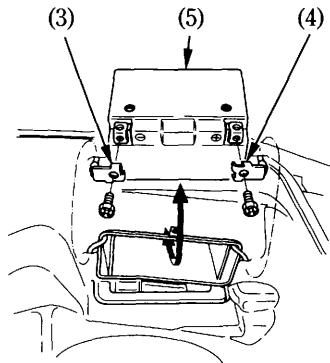

- (3) Negative (-) terminal lead  
(4) Positive (+) terminal lead  
(5) Battery