

# FEATURES (Not required for operation)

---

## **AM/FM RADIO**

The radio can be used with the ignition switch at ACC, ON or P.

### **Power Switch/Volume Control Knob**

When this knob is turned clockwise, power is applied to the radio, and the display indicates "AM" or "FM." Turning the knob further increases the volume. If the display does not show "AM" or "FM," the radio/cassette button is in the TAPE mode. To play the radio, push this switch.

### **AM/FM Band Button**

To receive FM signals, push this button. To set to AM, push this button again. The "AM" or "FM" and "ST" (stereo signal reception only) will be visible in the display. "ST" lights up when an FM station in stereo is being received. As FM stereo reception becomes weaker, special circuits in the radio gradually blend the sound toward mono to maintain some sound quality, even though the ST indicator remains ON. Stereo reception is available only for FM stereo broadcasts, not for AM.

### **Preset Stations**

You can preset six AM stations and six FM stations. AM and FM stations are preset as follows:

1. Find the station you wish by the search lever (page 53).
2. Push the M button and the memory indicator "CH" will blink in the display.
3. Push the CH (channel) button and select a channel you wish, then push the M button again while the memory indicator "CH" is blinking. The indicator will stop blinking and the preset channel will be visible in the display. The memory indicator will go off 7 seconds after the M button was pushed, if the M button was not pushed again.
4. The memory is erased automatically if you tune and preset a new AM or FM station.