

FUEL

Manual Fuel Valve

The manual fuel valve (1) is under the left side of the fuel tank in the left side cover. Set it to ON for normal operation or RES when you start to run out of the main fuel supply. The OFF setting is only for long term storage or servicing of fuel system components.

Automatic Fuel ON-OFF

With the fuel valve set to ON (or RES) fuel flows to the carburetors only when the engine is being started or is running. A diaphragm shuts off fuel flow when the engine is turned off.


Reserve Fuel

When the main fuel supply is gone, turn the fuel valve to RES. Refill the tank as soon as possible after switching to RES, then switch the valve back to ON.

The reserve fuel supply is:

4.3 l (1.14 US gal , 0.95 Imp gal)

Remember to check that the fuel valve is in the ON position each time you refuel. If the valve is left in the RES position, you may run out of fuel with no reserve.

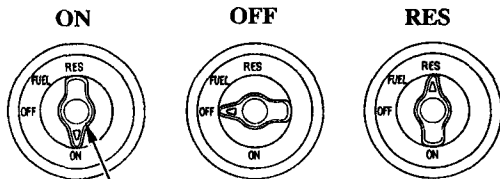

(1)

(1) Fuel valve