


Installation Notes:

Reverse the removal procedure to install the wheel.

If a torque wrench was not used for installation, see your authorized Honda dealer as soon as possible to verify proper assembly. Improper assembly may lead to loss of braking capacity.

- Position the wheel between the fork legs and insert the front axle shaft from the left side, through the left fork leg and wheel hub.
- Position the lug on the speedometer gearbox against the lug (1) on the left fork leg.
- When installing the wheel, fit the brake disc carefully between the brake pads to avoid damaging the pads.
- Tighten the axle bolt to the specified torque.
Axle bolt torque:
90 N·m (9.2 kgf·m , 67 lbf·ft)
- Tighten all the axle pinch bolts to the specified torque.
Axle pinch bolts torque:
22 N·m (2.2 kgf·m , 16 lbf·ft)

- Install the caliper fixing bolts, and tighten to a torque of:
31 N·m (3.2 kgf·m , 23 lbf·ft)

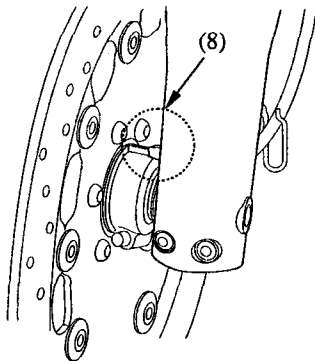

(8) Lug