

---

## Tape player Maintenance

The head in the cassette tape player can pick up dirt or tape deposits each time a cassette is played. The result is low or "muddy" sound from one or both channels, as if the treble tone control were turned all the way down. To prevent this, you should periodically clean the head with a commercially available cleaning cassette.

As preventive maintenance, clean the head about every 30 hours of use. If you wait until the head becomes very dirty (noticeably poor sound), it may not be possible to remove all deposits with a simple cleaning cassette.


### CAUTION:

- ***Storing cassettes out of their cases, or touching the magnetic tape with your fingers will increase the amount of dirt that gets to the tape head. Using low-quality "off-brand" tape will increase the amount of tape deposits that get on the head. Both of these practices may eventually lead to damage of the head and playing mechanism.***

## Power Switch/Volume Control Knob

When this button is turned clockwise, power is applied to the radio, and display indicates "AM" or "FM". Then push the radio/cassette button to hear the cassette tape. The display will be changed to "📻" or "📻" when the deck is loaded with a tape. Turning the knob further increases the volume.

Power Switch/Volume Control Knob

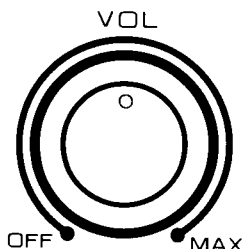

Radio/Cassette button

