

# ESSENTIAL INDIVIDUAL COMPONENTS

---

## RIGHT HANDLEBAR CONTROLS

### Engine Stop Switch

The three position engine stop switch is next to the throttle grip. When the switch is in the RUN position, the engine will operate. When the switch is in either OFF position, the engine will not operate. This switch is intended primarily as a safety or emergency switch and should normally remain in the RUN position.

#### NOTE: (*U only*)

- If your motorcycle is stopped with the ignition switch ON and the engine stop switch OFF, the headlight and taillight will still be on, resulting in battery discharge.

### Start/Reverse Button

The start/reverse button is below the engine stop switch. When the start/reverse button is pressed, the starter motor will crank the engine and the headlight will automatically go off, but the taillight will stay on. See pages 86 – 89 for “Starting Procedure.”

