

FEATURES (Not required for operation)

AUDIO SYSTEM (SE)

The audio system can be used with the ignition switch at ACC, ON or P.


▲ WARNING

- ***Keep both hands on the handlebars while riding. never:***
 - ***Adjust the volume control.***
 - ***Switch between radio and cassette***
 - ***Install or remove cassette tape***
- ***Do not turn up the volume so loud that emergency vehicles or traffic cannot be heard.***

AM/FM Radio

Power Switch/Volume Control Knob:

When this knob is turned clockwise, power is applied to the radio, and the display indicates "AM" or "FM." Turning the knob further increases the volume. If the display does not show "AM" or "FM," the radio/cassette button is in the TAPE mode. To play the radio, push this switch.

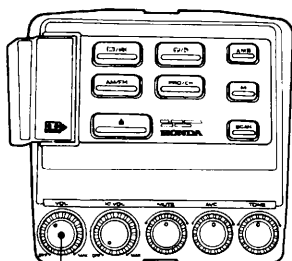

Power Switch/Volume Control Knob